

SP Energy Networks Distributed Generation Heat Maps – User Guide

Measurement Tool – click here to open the Measurement tool which allows you to measure distances between points on the map

Basemap Gallery – click here to open the Basemap Gallery which allows you to switch to a different basemap (e.g. Aerial Imagery)

Information – click here to get more information on the constraint levels, and when the data was last updated

Search – allows you to search for an address, postcode, or for coordinates

Layer Control – click here to open the Layer Control which allows you to control how the layers are displayed – for example you can switch layers on and off and control what order they are shown on the map

Legend – click here to open the Legend, which gives information on the symbols and layers which are currently visible

The header of the pop-up indicates if information is available for more than one substation or circuit at that location, and the arrows on the right of the header allow you to scroll through the information for each asset

Asset pop-ups – clicking on a substation or circuit provides more information on the constraint for that asset, as well as contact details if you require further information

Click here to collapse/expand the side panel

Click here to open an 'overview' window to show the area you are looking at from a smaller scale